

GREASE TRAP INSTALLATION AND SERVICE INSTRUCTION

MODELS:

Model	Size	Litre
GT-5	385x385x290mm	16L
GT-9	380x275x230mm	36L
GT-18	655x455x330mm	60L
GT-26	800x500x380mm	110L

Installation Instructions

- 1. Install the grease trap as close as possible to the sink it is being fitted to.
- 2. Make sure the grease trap is easy to access for cleaning.
- 3. Ensure an air intake (vent) is installed before the inlet.
- 4. Use Flexi couplings for inlet and outlet for easy removal and maintenance.

Installation Diagram

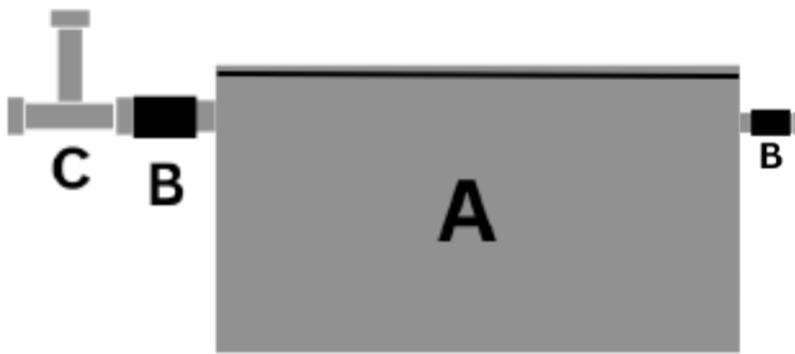


Diagram Ref	Name	Additional Info
A	Grease Trap	Supplied
B	Flexi Coupler	Not Supplier
C	Air Inlet	Not Supplier

Cleaning

All grease traps must be cleaned regularly. The frequency of cleaning depends upon the capacity of the interceptor and the amount of grease in the wastewater. The cleaning interval may vary greatly from one application to another. When a cleaning cycle has been determined for a particular installation, maintaining that cleaning cycle is critical to the efficiency of the interceptor.

It is recommended to remove the entire grease trap and deep clean it periodically, we would recommend using the valve tap on the side to empty the trap before moving.

Regular Cleaning Instructions (Not Deep Clean)

1. Place a container under ball valve and open valve, drain liquid into container.
2. Remove the stainless steel lid.
3. Lift out perforated basket and remove food and other solids caught.
4. Remove any solid waste that may not have been caught by the basket.
5. Replace lid.
6. Run water through the trap to regain operational water levels.