


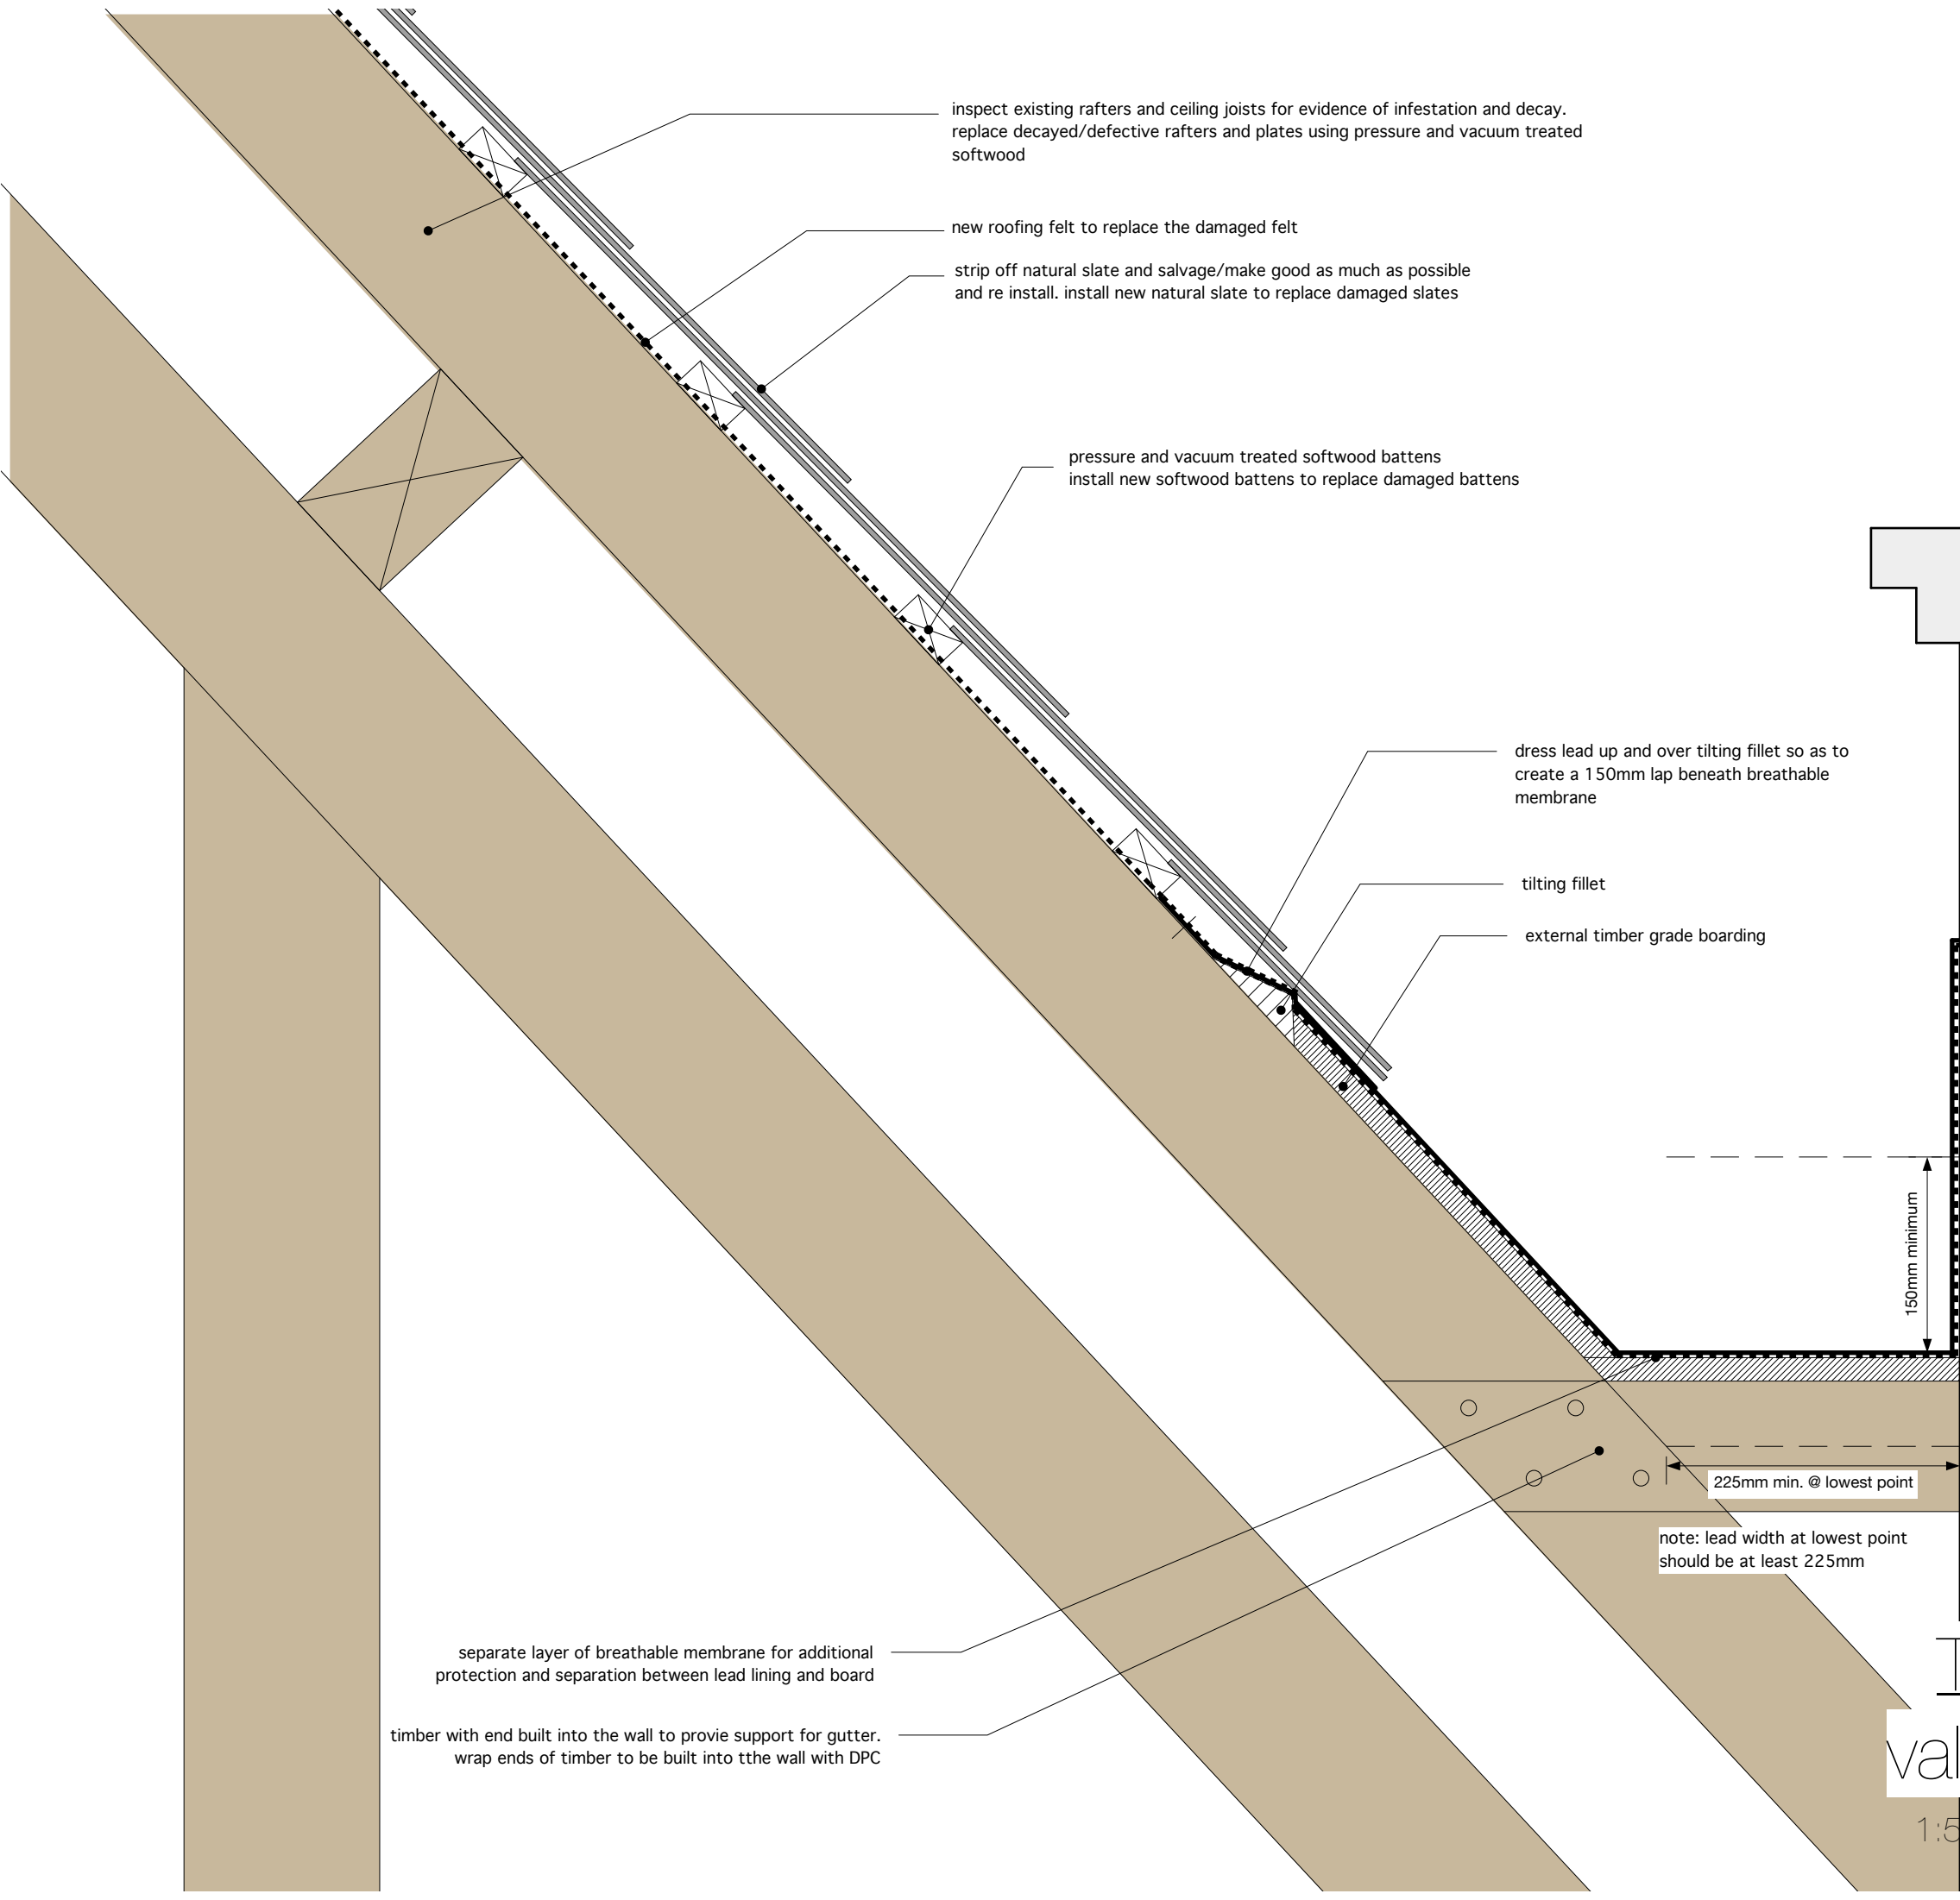

inspect existing rafters and ceiling joists for evidence of infestation and decay.
replace decayed/defective rafters and plates using pressure and vacuum treated
softwood

new roofing felt to replace the damaged felt

strip off natural slate and salvage/make good as much as possible
and re install. install new natural slate to replace damaged slates

pressure and vacuum treated softwood battens
install new softwood battens to replace damaged battens

dress lead up and over tilting fillet so as to
create a 150mm lap beneath breathable
membrane

tilting fillet

external timber grade boarding

parapet stone wall to be cleaned and repaired. damaged stone details to be
replaced

150mm minimum

225mm min. @ lowest point

note: lead width at lowest point
should be at least 225mm

separate layer of breathable membrane for additional
protection and separation between lead lining and board

timber with end built into the wall to provie support for gutter.
wrap ends of timber to be built into tthe wall with DPC

Rev	Date:	Action:
This drawing is copyright.		
Dimensions to be checked on site and any discrepancies reported to the Architect immediately .		
Do not scale, use figured dimensions only.		



Merthyr Tydfill CBC	
Treharris Library	
valley gutter detail	
1:5 @ A3	
2217 - 013	-
6 north road, cardiff. cf10 3du 029 2034 0491 www.cfw-architects.co.uk	

Treharris Library
valley gutter detail

1:5 @ A3

0.1m

0.2m