




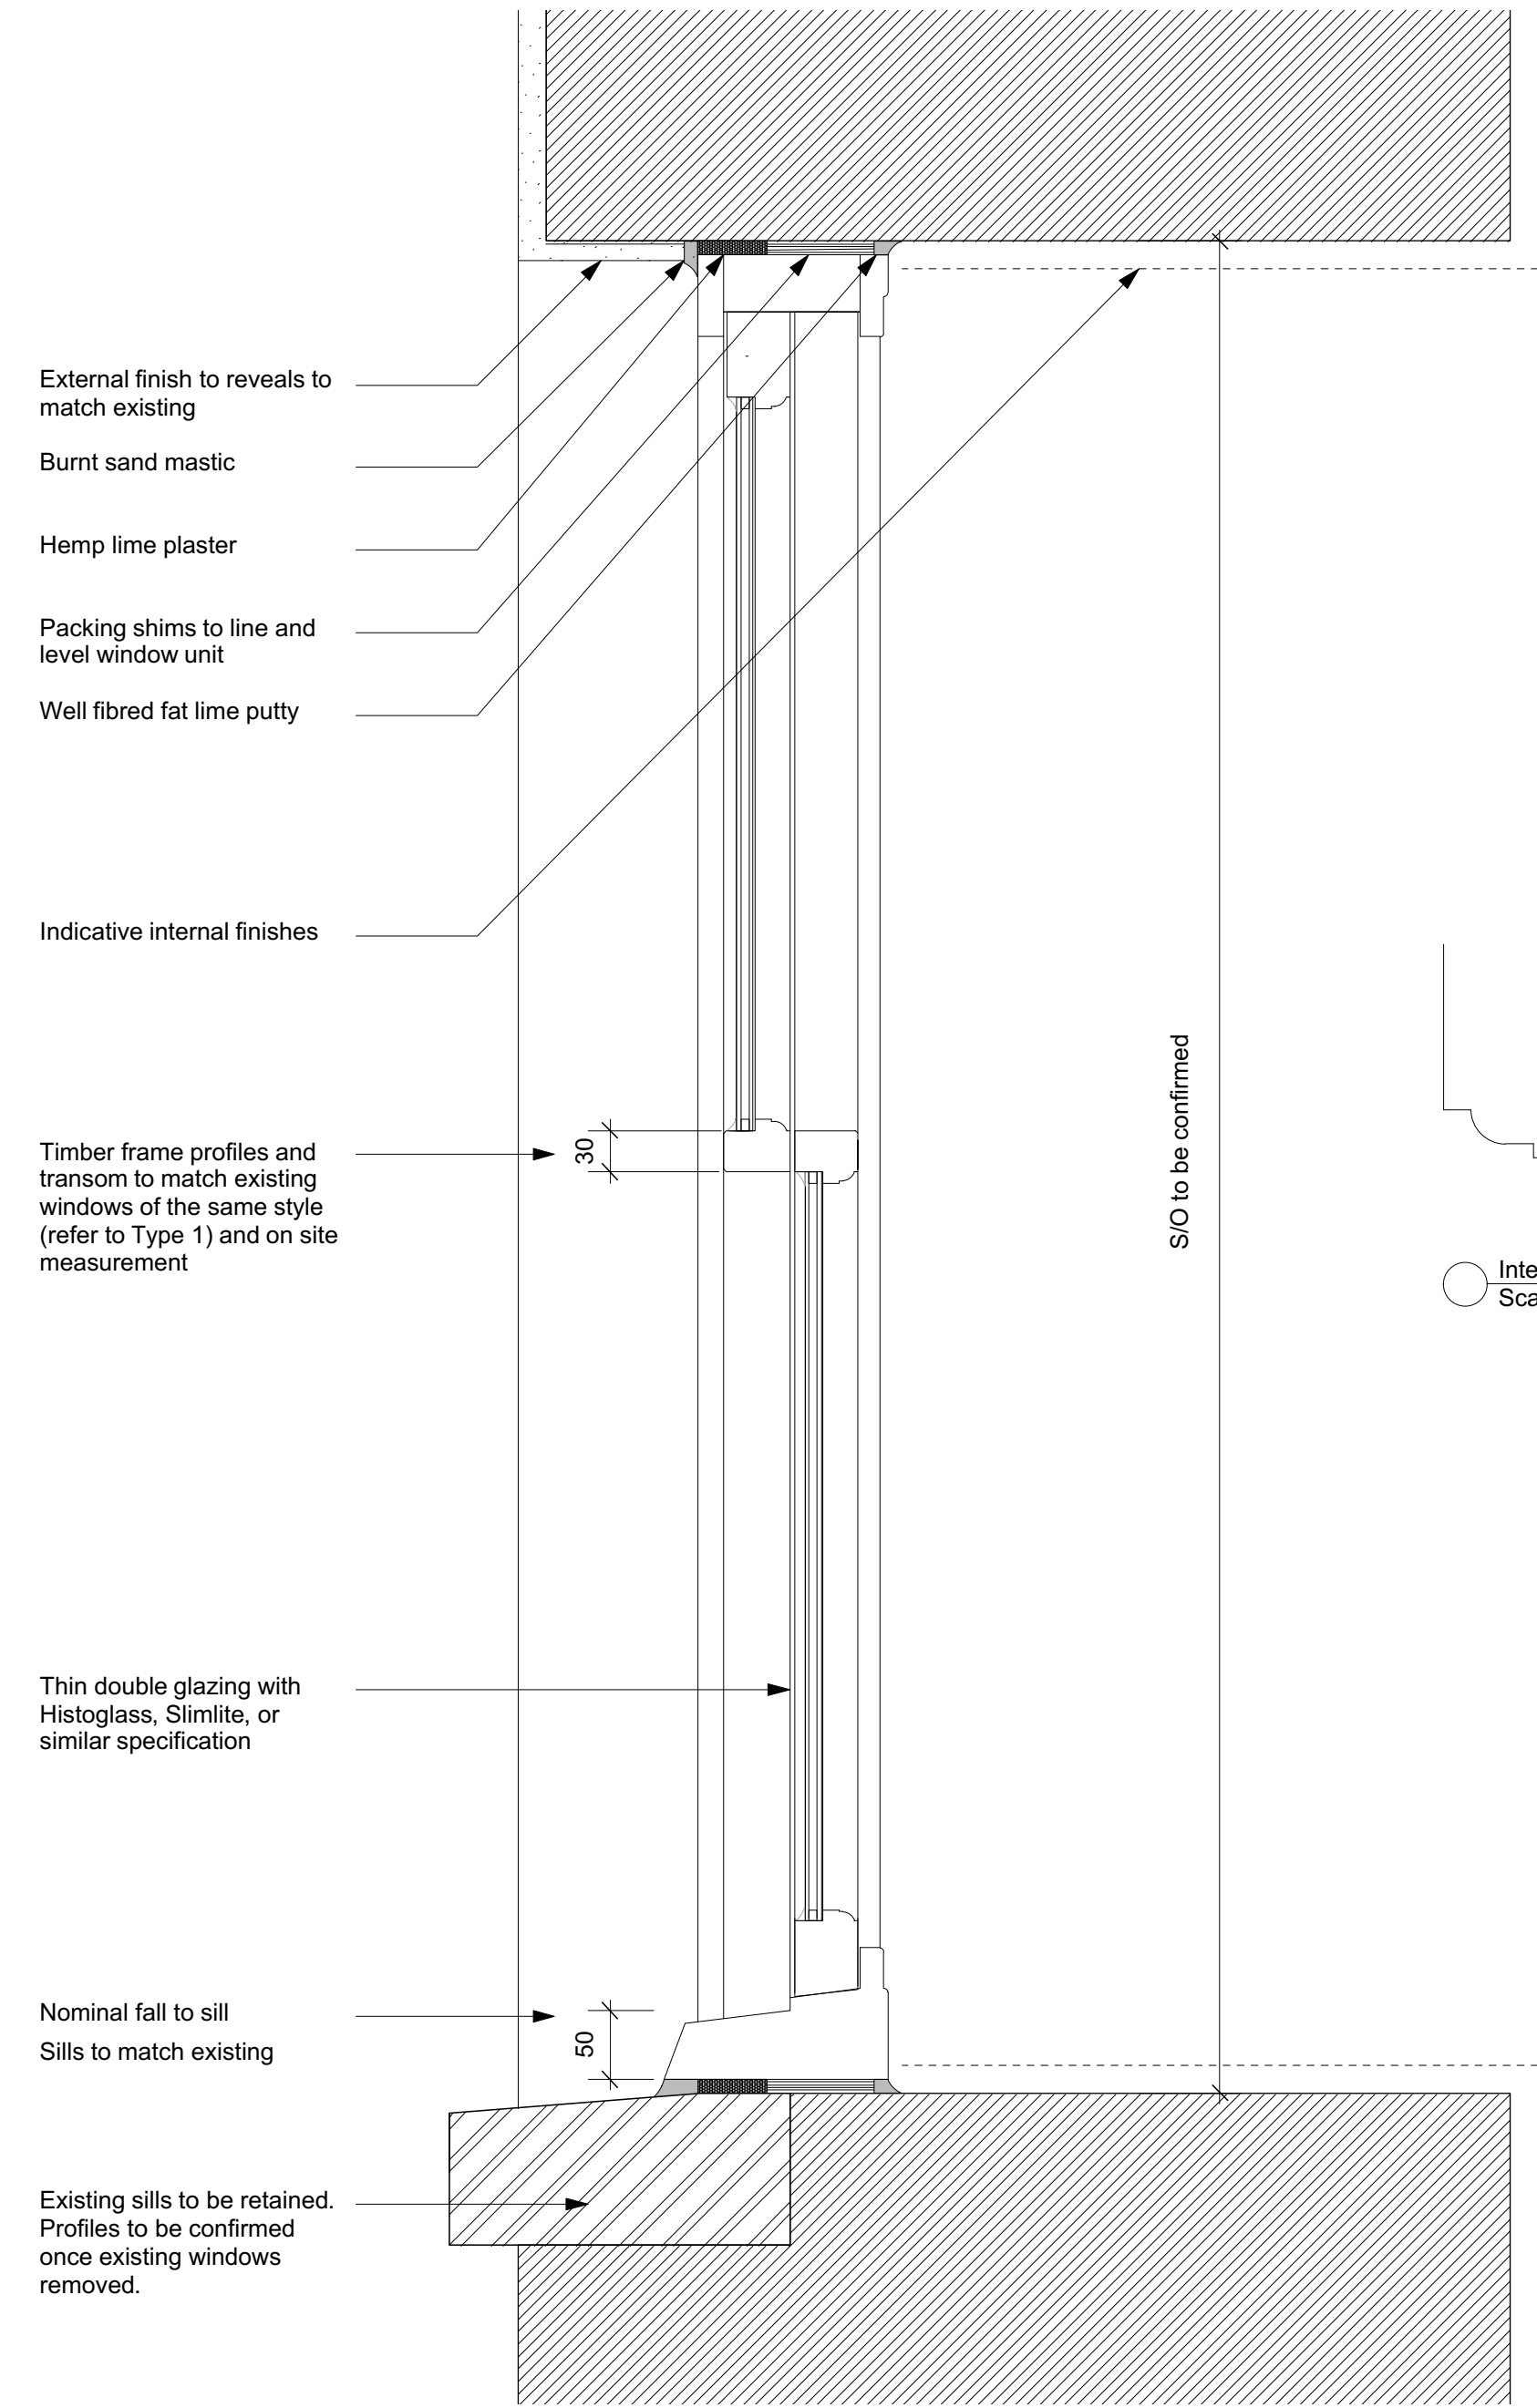

2 Section, Replacement Window
Scale: 1:5

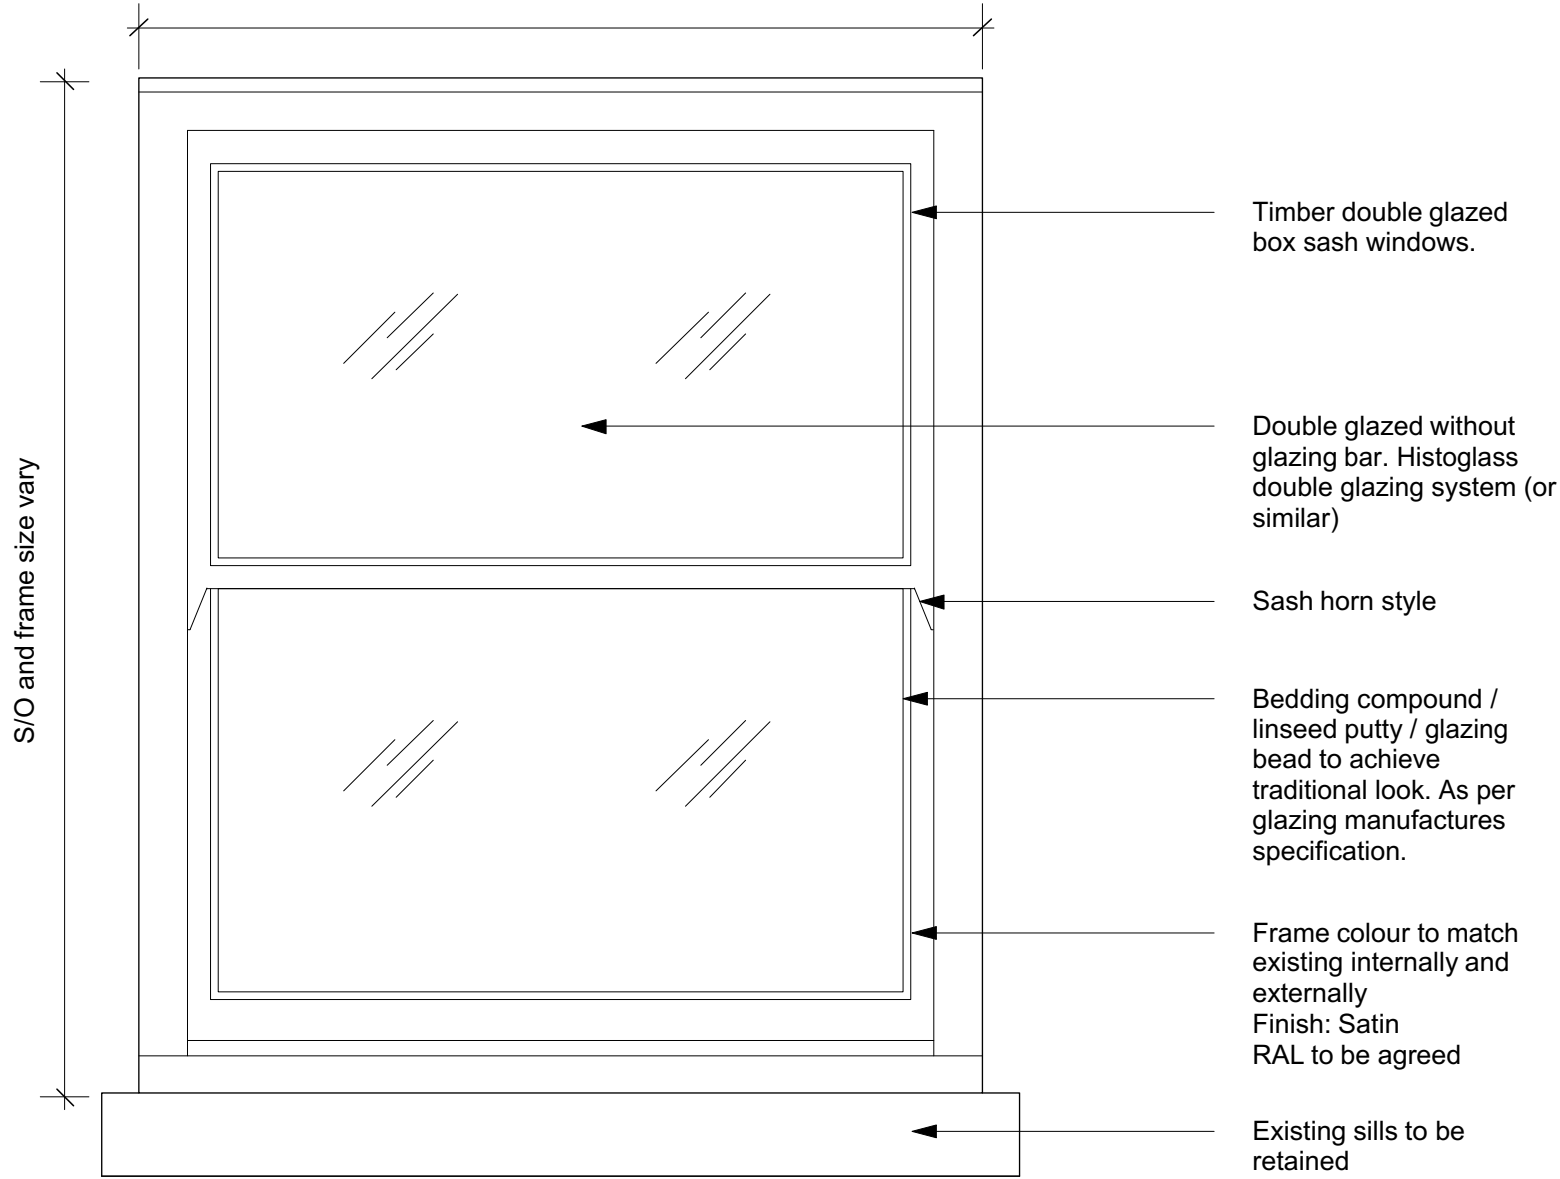

1 Replacement Window - W0.07 Indicative Example
Scale: 1:10

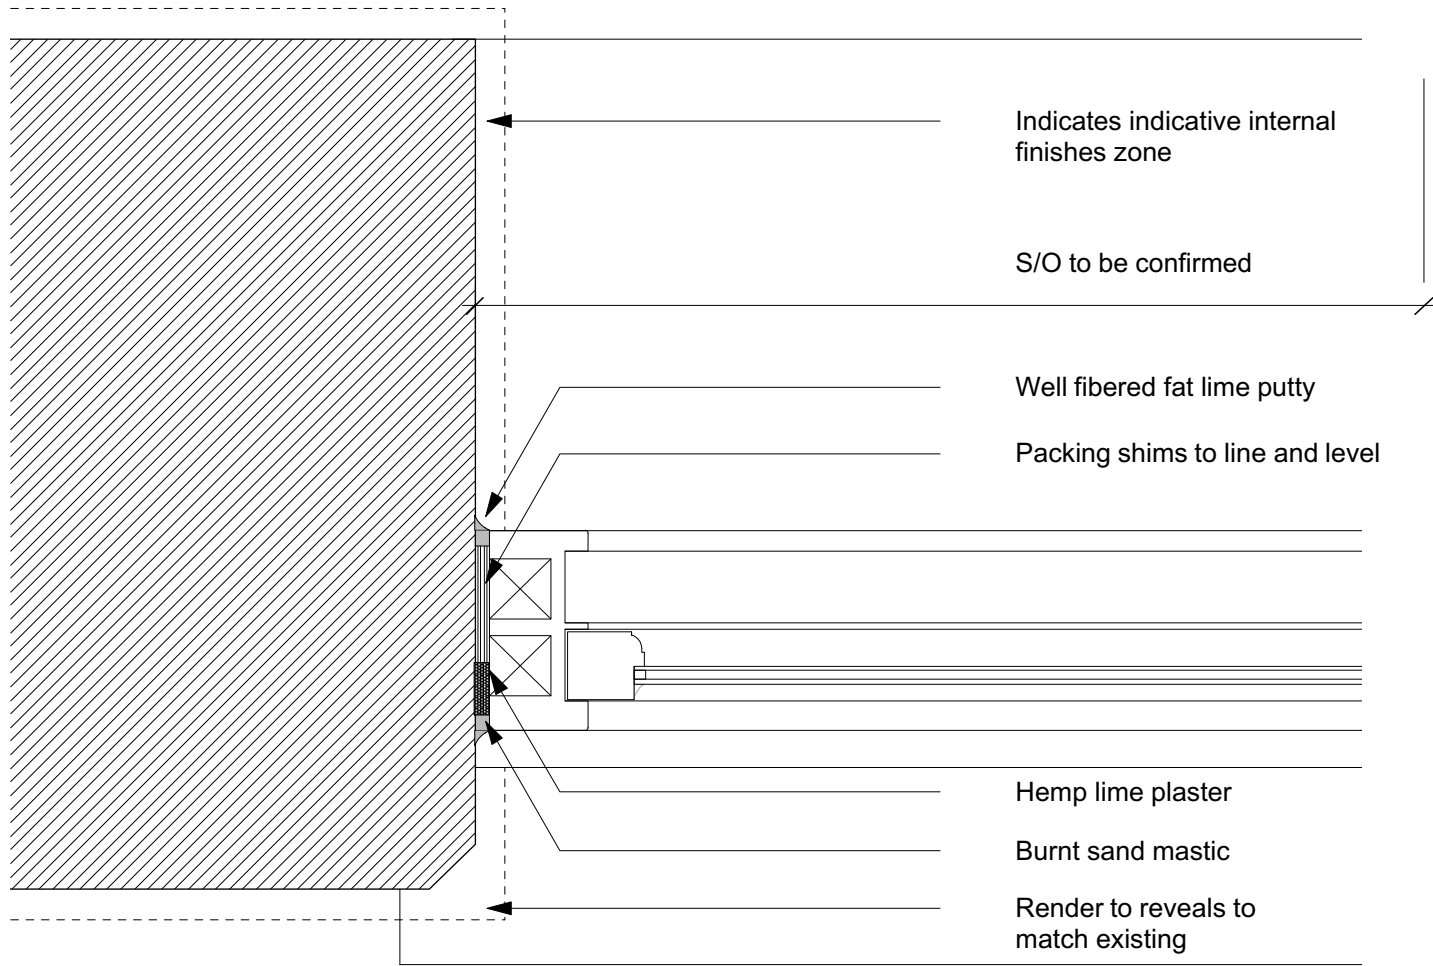

3 Plan, Replacement Window
Scale: 1:5




Sash window claw fastener with allen key lock
Finish: Satin Chrome



Sash window lifts
Finish: Satin Chrome



Sash window cord pulleys
Finish: Satin Chrome

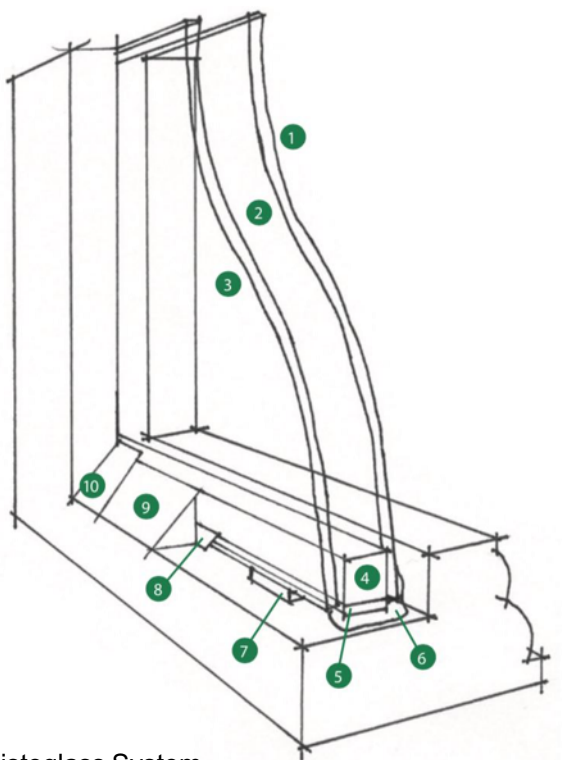

Histoglass System

1. Low-E float glass inner pane
2. Gas-filled cavity
3. Outer pane
4. Aluminium spacer bar
5. Perimeter seal
6. Bedding compound: Kawo Elastokitt
7. Hardwood spacer
8. Sprig
9. Putty line - linseed putty, bead or Kawo Elastokitt
10. Paint overlapping onto the glass by 1-2mm